


HV_VAnode HV_IAnode HV_VDrift HV_IDrift HV_FSM Anode HV_FSM Drift TRD_FED TRD_LV

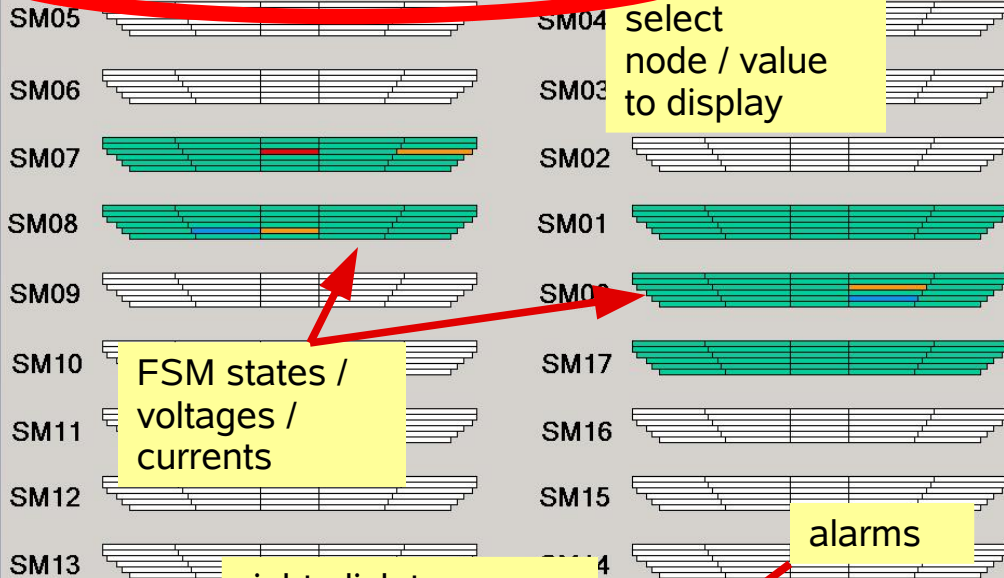

select
node / value
to display

FSM states /
voltages /
currents

alarms

right-click to open
alarm help

Alert	Time	Alert Text
2009.06.13 14:24:33.345	RAV/TrdPlant/Loop06	trd_gas:CaV/TrdPlant/Loop06. Bad
2009.06.13 14:24:33.345	RAV/TrdPlant/Loop13	trd_gas:CaV/TrdPlant/Loop13. Bad

open_help